

Ultrathin Touch Slide RF Remote Controller

Model No.: R11, R12, R13, R14, R10

Touch color slide / 1-5 color / Wireless remote 30m distance / CR2032 battery / Magnet stuck fix

Features

- Apply to single color, dual color, RGB, RGB+W or RGB+CCT LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.
- White & Black available

 


CE RoHS LVD RED

Technical Parameters

| Input and Output | | Safety and EMC | | Package | |
|------------------|-------------------------|----------------------|---------------------------|-----------------------|---------------------|
| Output signal | RF(2.4GHz) | EMC standard (EMC) | ETSI EN 301 489-1 V2.2.3 | Size | L156 x W48 x H22mm |
| Working voltage | 3VDC(CR2032) | | ETSI EN 301 489-17 V3.2.4 | Gross weight | 0.075kg |
| Working current | <5mA | Safety standard(LVD) | EN 62368-1:2020+A11:2020 | Environment | |
| Standby current | <10µA | Radio Equipment(RED) | ETSI EN 300 328 V2.2.2 | Operation temperature | Ta: -30 °C ~ +55 °C |
| Standby time | 1 year | Certification | CE,EMC,LVD,RED | Warranty | |
| Remote distance | 30m(Barrier-free space) | | | Warranty | 5 years |

Mechanical Structures and Installations

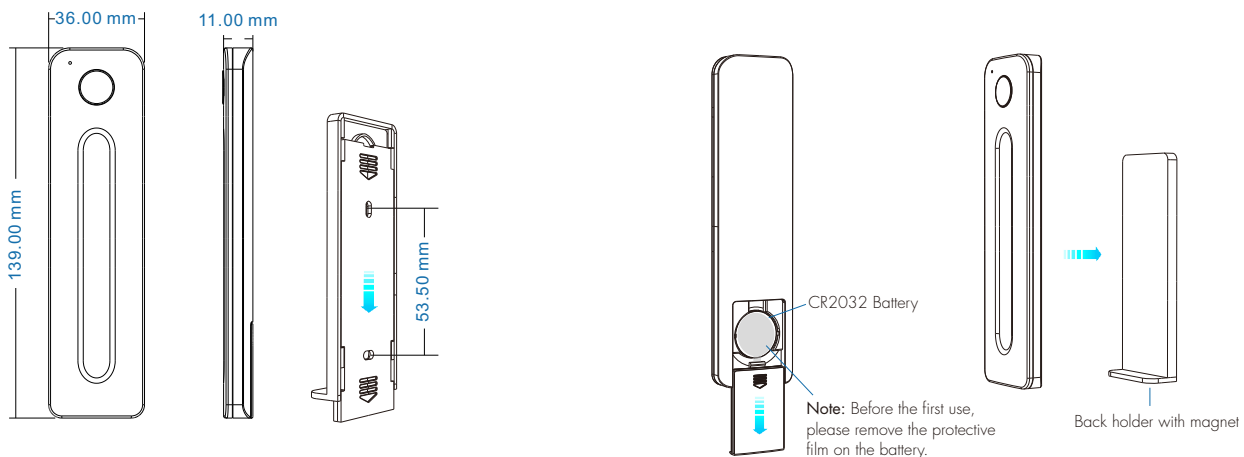

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with paster.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:
Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful.

 
Delete:
Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart


Match:
Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

Delete:
Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.


● R11 1 zone dimming remote

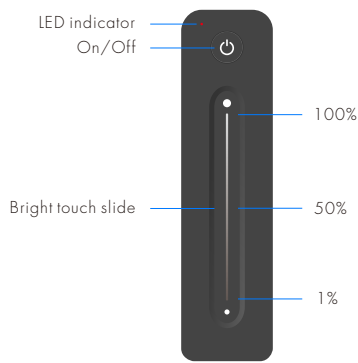


● R12 1 zone CCT remote

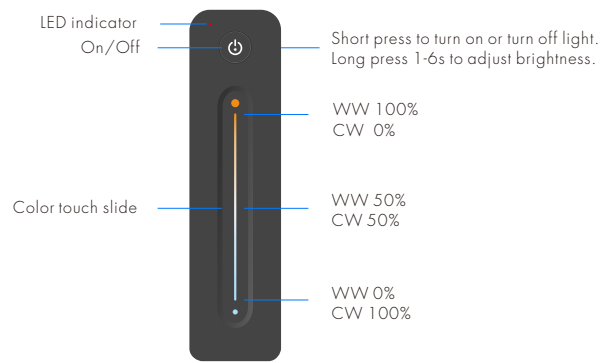 

● R13 1 zone RGB remote

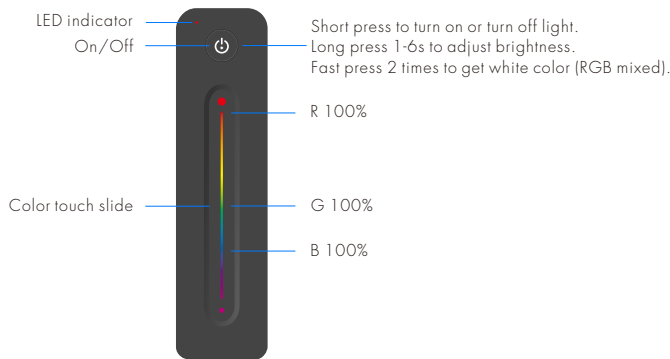 


● R14 1 zone RGBW remote

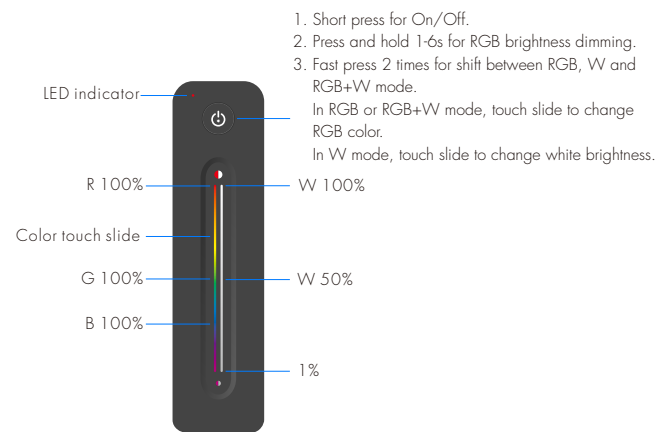 

1. Short press for On/Off.
 2. Press and hold 1-6s for RGB brightness dimming.
 3. Fast press 2 times for shift between RGB, W and RGB+W mode.
- In RGB or RGB+W mode, touch slide to change RGB color.
In W mode, touch slide to change white brightness.

 ● R10 1 zone RGB+CCT

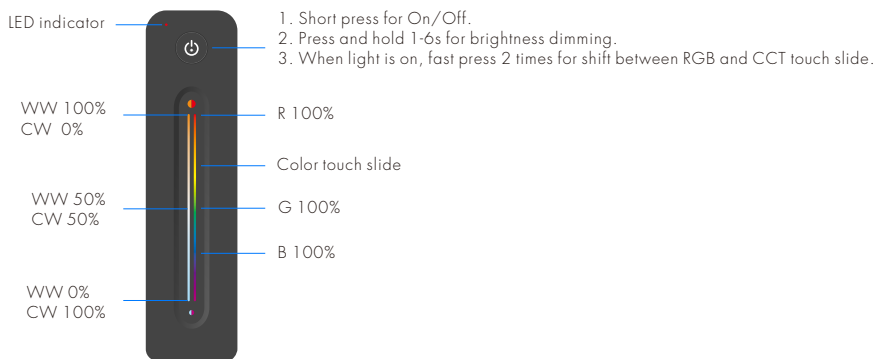

1. Short press for On/Off.
2. Press and hold 1-6s for brightness dimming.
3. When light is on, fast press 2 times for shift between RGB and CCT touch slide.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.